


# Spirit 300

# Performance Data Sheet



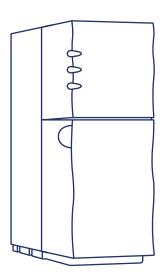

This system has been tested according to NSF/ANSI 58, 372 and CSA B483.1 for reduction of the substance listed below.

Ths reverse osmosis system contains replaceable treatment components, critical for the effective reduction of total dissolved solids. It is the user's responsibility to, and the manufacturer strongly recommends that the user, periodically have the product water tested to verify the system is performing properly.

If Spirit 300 filters and membrane elements are not used, health related contaminant reduction claims are invalid.

#### SPECIFIC CONTAMINANT PERFORMANCE

Contaminants	Inlfuent (avg. mg/L)	Effluent (ave. mg/L)	Ave. % reduction
TDS	740	90.7	87.7

#### SPECIFIC PERFORMANCE RATING

Product Water Production	893 Gallons Per Day (3380 Liters Per Day)
Average System Recovery	60.6%

Average System Recovery is the percentage of the influent water to the membrane portion of the system that is available to the user as reverse osmosis treated water when operated as designed (without a pressurized storage tank).

#### SYSTEM SPECIFICATIONS AND OPERATING PARAMETERS

Inlet Water Condition	Minimum	Maximum
Pressure	29 psi (2 bar)	145 psi (10 bar)
Flow	6 L/min	-
TDS	0 mg/L	1200 mg/L
Conductivity	0 μS/cm	1600 μS/cm
Temperature	35.6 °F (2 °C)	95 °F (35 °C)
Hardness	0 mg/L	100 mg/L
Iron (II)	0 mg/L	0.3 mg/L
Iron (III)	0 mg/L	0.5 mg/L
Turbidity	0 FNU	0.5 FNU

Actual system performance will vary depending on varying water temperature and pressure, TDS levels and inlet water chemistry. Operating the system in water conditions outside the minimum or maximum operating parameters may result in reduced system performance and membrane element life.

**Warning:** Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.

#### **RO SYSTEM & FILTRATION COMPONENTS**

Prefilter	Granulated Activated Carbon filter	919240004		
Membrane	High Flow Membrane	150759380-SP		
Defeate O work Manual Constant in the land in the Hall at the land in the Hall at the Hall				

Refer to Owner's Manual for electrical requirements, installation instructions and servicing/replacement component recommendations.

#### **WARRANTY**

Refer to www.bluewatergroup.com/warranty for more information on Limited Warranty.

# **Bluewater AB**

Danderydsgatan 11 114 26 Stockholm Sweden

T: +46 8-56 473 800 www.bluewatergroup.com

# **Bluewater China**

Room 1503 City Gateway N0.398 North Caoxi Road Shanghai, China

T: +86 21 6126 6210 cn.bluewatergroup.com

# Bluewater USA Inc.

7603 W 145th Terrace Overland Park Kansas 66223, USA

us.bluewatergroup.com

